



UCUBE-15X15

Before use, please take the time to read this datasheet and make sure you understood the advices and caution of use.



User Security

- Do not watch directly the beam of light or through any optical instrument.
- Avoid any contact with the LEDs or its lens.
- Code IP40: protected against solid corpses larger than 1 mm and non-protected against water intrusion.
- Use the product in an environment where the working temperature is between +15°C and +35°C and there is little humid air (<80%): if those conditions are not respected the product can be damaged.
- Do not use the product in an environment where smokes and oil vapors are present.
- Never try to repair by yourself any potential damages on the product.
- Make sure to use the right power supply before connecting the product.
- Do not reverse the electrical polarity – check your connections and the conventions before turning on the product.
- Make sure you have the correct connector to link the product to the power supply.

Any incorrect use cancels the warranty.

Table of contents

User Security	1
Technical Overview	3
Product reference	4
Optical characteristics	5
Mechanical dimensions	8
How to use: with the power supply	9
Signals	12
Eyes & Skin Safety	14
Legal obligations	15
Possible health damages	15
Protective equipment	16



Technical Overview

		UCUBE-15X15™
Electronics 	Power supply	48V DC
	Illumination mode	Continuous with a DIM process [0-10V]
	Connector	SubD 13W3
	Power consumption	Max 300W
Optics 	Wavelength	365 or 385 or 395 or 405 nm <i>Contact us for other wavelengths (UVA, UVB & UVC).</i>
	Max Irradiance at 100mm	300 mW/cm ²
	Optical option	<i>Can be provided to collimate the light beam. It allows to keep a high irradiance at a higher working distance. For more details, check out the section "optical characteristics".</i>
Mechanics 	Width and height	174 mm x 174 mm
	Length	182.5 mm
	Material	Device body: Aluminum alloy
	Weight	4,0 kg
Thermal 	Cooling system	Active air cooling with fans
Environment 	Working temperature	+10°C to +35°C
	Working Humidity	< 80% for temp < 30°C
	IP Code	IP5X



Product reference

Standard version:

Wavelength (nm)	Number of LEDs
UCUBE - XXX – 15X15	
365	15X15
385	20X20
395	
405	


Optical option:

Wavelength (nm)	Number of LEDs
UCUBE - XXX – 15X15 - COL	
365	15X15
385	20X20
395	
405	



Optical characteristics

Spectra

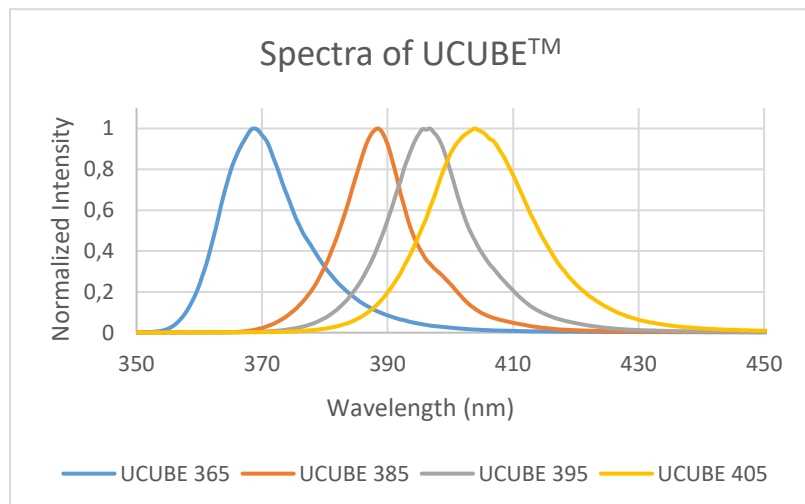

	Pic Wavelength	Full width at half maximum
UCUBE 365	368 nm	14 nm
UCUBE 385	388 nm	10 nm
UCUBE 395	397 nm	14 nm
UCUBE 405	404 nm	18 nm

For other wavelengths (IR / VISIBLE / UVA: 325nm, 340nm / UVB: 310nm / UVC: 255nm, 265nm, 275nm), do not hesitate to contact us.

Option Collimation Optics


The UCUBE™, whatever the version can be provided with or without optics to improve the collimation of the light beam, depending on your needs.

The collimation half-angle of the UCUBE with optics has a value of 6°.


This option allows you to increase the irradiance homogeneity.




Photometry: without optics

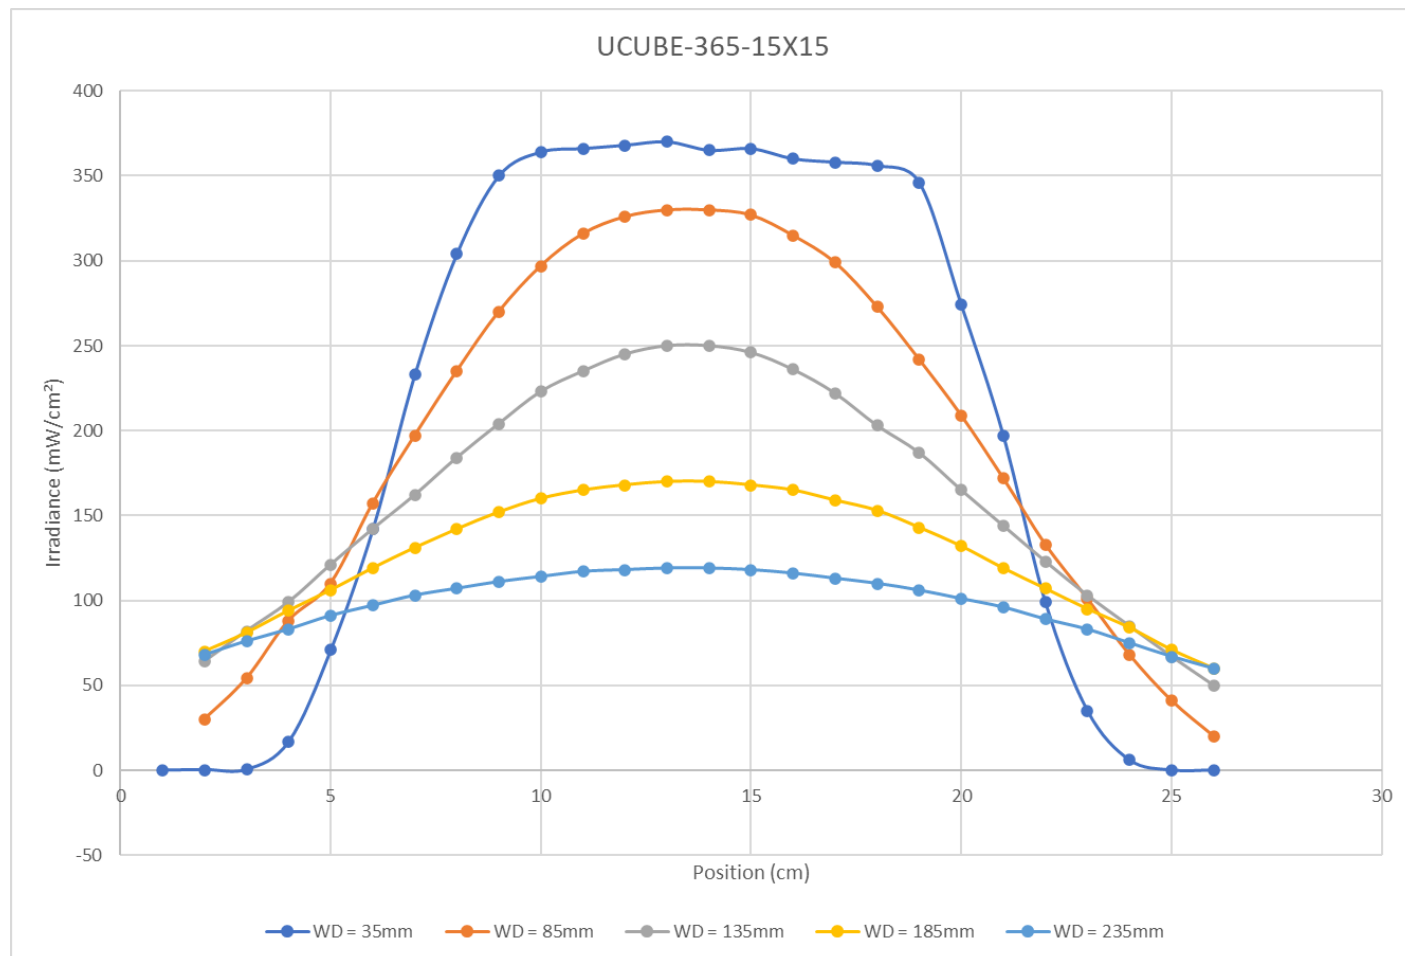


Photometry: with optics

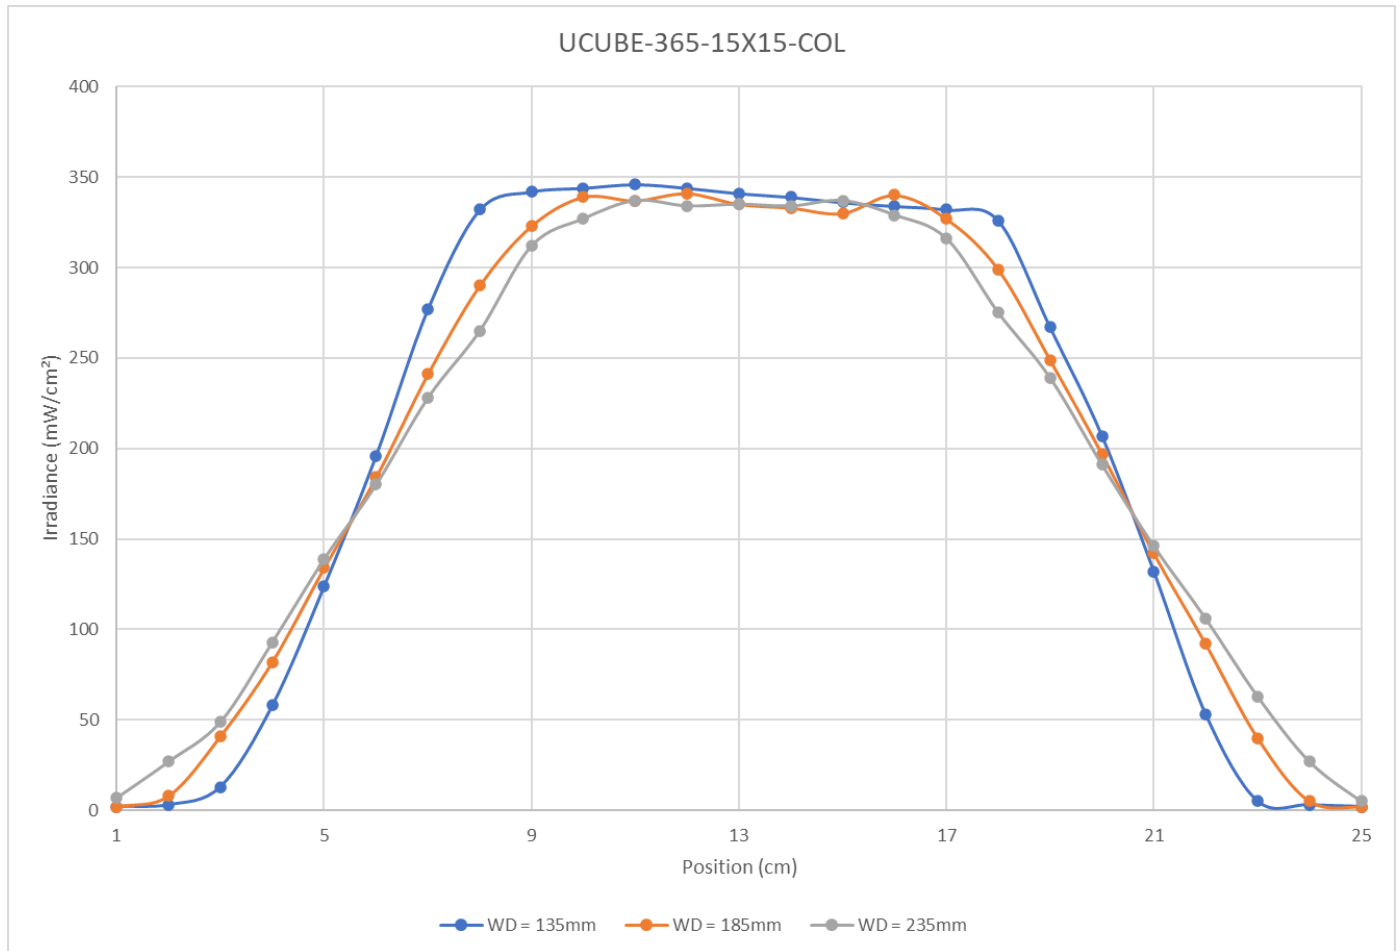

Homogeneity without optics @ 10cm – UCUBE 25 LEDs

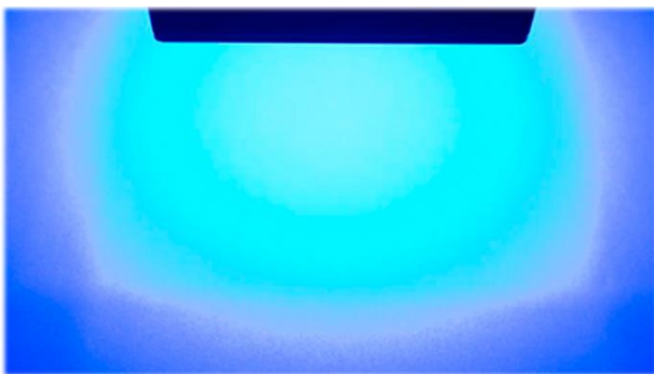


Homogeneity with optics @ 10cm – UCUBE 25 LEDs

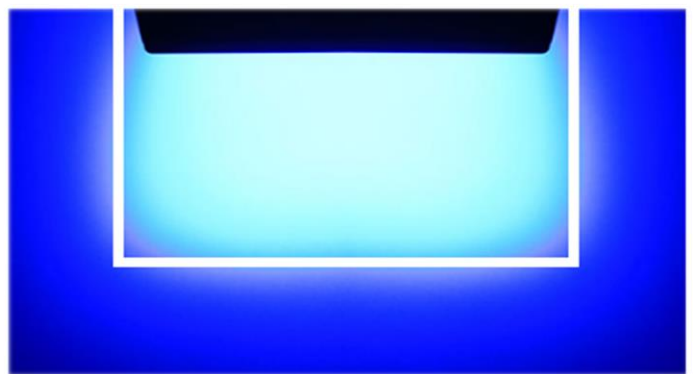



Mechanical dimensions

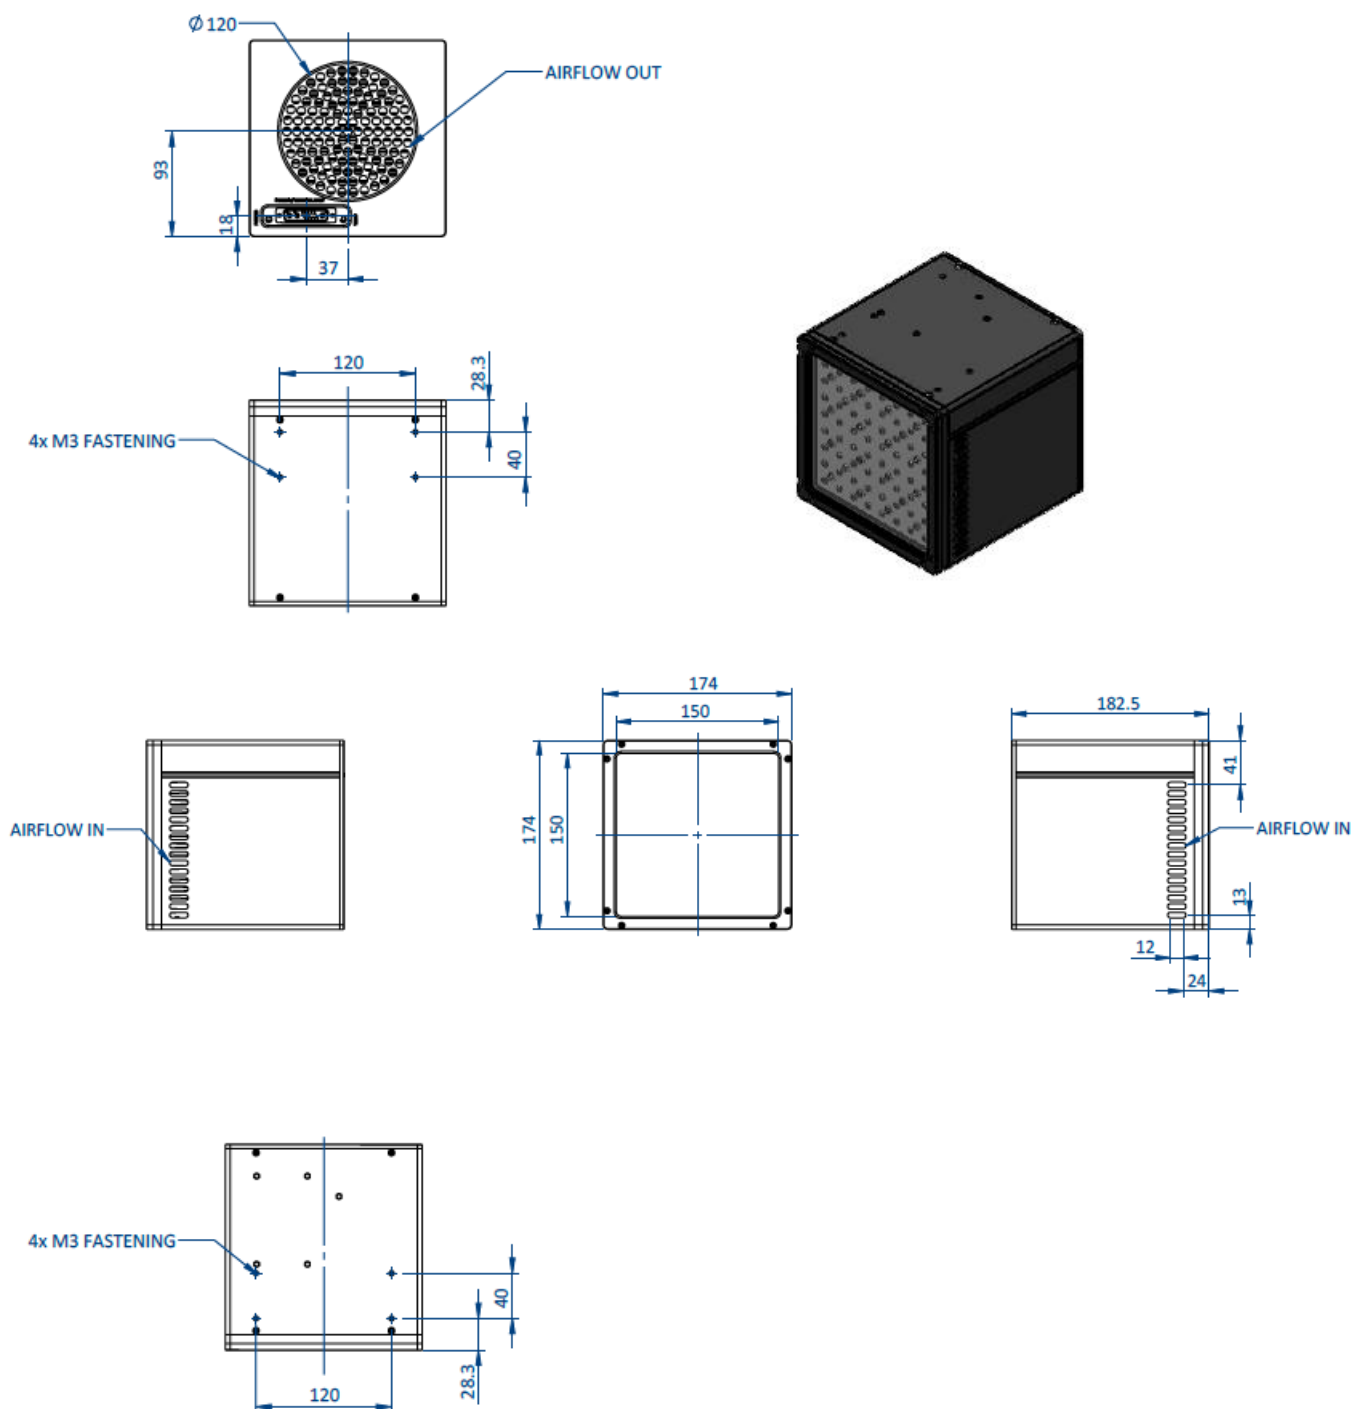



How to use: with the power supply

The UCUBE™ can be provided with its power supply UPOWER™

Steps	Illustrations
Fix the product using the dimensions given in the “mechanical considerations” part (pay attention to leave a 10 cm space next to mechanicals holes for ventilation).	
Connect the cable SubD13W3 between the UCUBE™ and the UPOWER™	
Plug the UPOWER to a 230V outlet	
The UCUBE™ is ready to be used. To turn the UCUBE™ ON, you can either use the buttons ON on the UPOWER, or connect the UPOWER to your PLC	
How to choose the light intensity Use the light intensity controller buttons on the UPOWER to control the light intensity from 20% to 99%	

How to choose the exposure time

Use the TIMER interface on the UPOWER to choose the exposure time. The red timer is fixed, and the orange timer is the one that you can change. To validate the time, push the reset button on the timer.

How to lock the UPOWER

Turn the lock key in order to lock the timer configuration. The word "LOCK" appears on the timer screen.




*The version of the UPOWER™ is not furnished with the product. The UCUBE on the picture is a UCUBE-365-025 with UCUBE-COL-025 optical option.



How to use: without the power supply UPOWER™

To connect the product into an automate, use the cable by following the board below.

SubD13W3
Connector



Female SubD 13w3 Connector


Cable number/Color	Pin number	In / Out signal	Designation	Signal
1	A1	In	Power supply +	48V
2	A3	In	Common Ground	0V
3	Pin 1	In	Intensity Control - DIM	0-10V or look at the graph in section "signals"
5	Pin 6	Out	Temperature Default	0V to 6V: Fault 16V to 24V: No Fault
6	A3	In	Common ground	0V
7	Pin 4	In	Enable +	Dry contact CLOSED: UV emission allowed OPEN: UV emission stopped
8	Pin 5	In	Enable -	
Yellow and Green			Protective Ground	

For more details about the several signals emitted, check out the section "signals"



Signals

Intensity Control

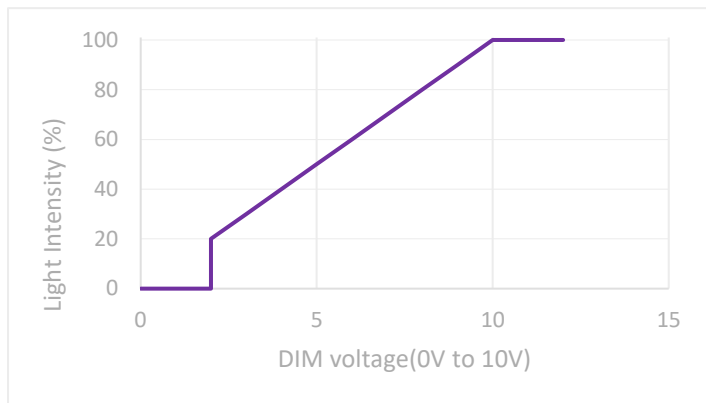

The UCUBE™ is supplied with a 48V constant voltage source.

Using the DIM pin, the light intensity can be controlled:

- 0V – OFF (0%)
- 2V to 10V – ON 20% to 100%
- 10V to 24V – ON (100%)

Max DIM power consumption: 5 mW

Temperature Default

If the temperature of the LED is too high, probably because the cooling system has a problem, the product puts itself in temperature safety in order to prevent any damage on the LEDs.

- The LED of temperature state turn red
- A signal is sent to the automate

Status LEDs

Two status LEDs 'Power' and 'Temp' can be found on both sides of the SubD connector. This LEDs give information about the proper functioning of the product.



STATUS	MEANING
POWER off	The product is not under voltage
POWER red	The product is under voltage but do not emit UV light
POWER green	The product is emitting UV light
TEMP green	The temperature inside the product is OK: the product can be turned on
TEMP red	The temperature of the LED is too high for the product to be turned on



Accessories

Description and Photo	Description
Cable for the UCUBE™ 	Both sides connectors (UPOWER™ link): 2 10 Reference: UCAB-SUBD-FD-5-D-L5 } Depending on the length you want (in meters) One side with bare wire (towards automate): 2 10 Reference: UCAB-SUBD-FM-5-DD-L5 } Depending on the length you want (in meters)
UPOWER™ 	We are able to provide you with any kind of power supply you need, different IHM, power, control and connectors. To build the one adapted to your needs please contact us.
UVCHAMBER™ 	The UCUBE can be integrated into a protected chamber in order to protect operators and to work in hidden time. A tray inside can be placed at different working distance from the UV light.



Eyes & Skin Safety



UWAVE products come under the standard DIN EN 62471:2008 which classified sources of optical radiation into risk groups subject to their potential photo biological hazard. Due to the emission of high UV irradiation, our products belong to Risk Group 3 (hazardous even for momentary exposure) therefore special safety measures, detailed in the following, must be observed.



To protect the eyes and skin staff everyone in the area must wear **protective equipment**. Protective **goggles** should comply with the standard EN 170 (Personal eye-protection - Ultraviolet filters - Transmittance requirements and recommended use). The goggles must protect eyes against direct and side irradiation.



Don't look directly at the product's output window because of a risk of becoming blind.
Don't expose skin too long without protection to avoid skin burning or cancer.



Due to the high emission power, the area near the LEDs can reach high temperature during operation.
Avoid touching directly the product and especially the output window.



Legal obligations

Under the law at present, workers' exposure must be lower than the Exposure Limit Value (Directive 2006/25/EC of the European Parliament). Depending on the wavelength of the product and the body part insulated, **Limit Values are summarized in the tables below:**

	Eye	Skin
Wavelength	315 – 400 nm (UVA)	180 – 400 nm (UVA, UVB, UVC)
Exposure Limit Value	10 000 J/m ²	30 J/m ²

Case study with a LED at 365 nm with an Optical Power of 10 mW/cm²:

For the **eyes**, the maximal exposure time (Δt), the Exposure Limit Value (*ELV*), and the Optical Power (*P*) of a UV product are linked by the formula:

$$\Delta t = \frac{ELV}{P}$$

For **skin**, the Optical Power is normalized by skin's sensitivity factors for each wavelength.

The maximal exposure time per day is calculated below:


	Eyes	Skin
Optical Power (normalized for skin)	10 mW/cm ²	4,7 µW/cm ²
Maximal exposure time per day	1 min 40 s	12 min

With a UV product with an optical power of 10 mW/cm², the Exposure Limit Value per day is **reached in 2 minutes for eyes and 12 minutes for skin** without any safety equipment. Therefore, protective equipment is needed when a UWAVE UV LED equipment is used.




Possible health damages

Effects on skin along unprotected UV exposure

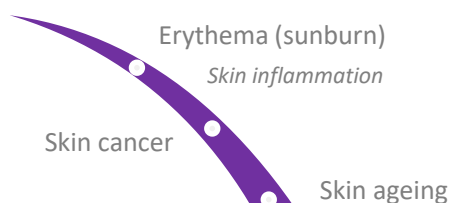

Effects on eyes along unprotected UV exposure

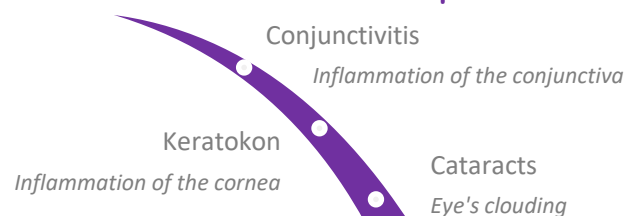



Protective equipment



Eyes protection



Safety goggles prevent UV damages to eyes.

REF: UGLASS-02

- Certified NF EN 170 absorbing 99,9% of UV radiation and visible light up to 532nm
- Protect against side irradiation
- Resist to chemical products and scratches

Beyond 2 minutes per day of eye UV LED exposure at 10 mW/cm², protective goggles are necessary according to the European Directive 2006/25/EC.



Safety face shield prevents UV damages to eyes and skin's face.

REF: UMASK-01

- Certified NF EN 170 absorbing 99,9% of UV radiation and visible light up to 400nm
- Protect against side irradiation
- Resist to scratches

Beyond 12 minutes per day of face UV LED exposure at 10 mW/cm², protective mask is necessary according to the European Directive 2006/25/EC.



Body protection



Safety gloves prevent UV damages to exposed skin.

REF: UGLOVE-01

- High protection against UV radiation
- Resist to chemical products and scratches

Beyond 12 minutes per day of hands UV LED exposure at 10 mW/cm², protective gloves are necessary according to the European Directive 2006/25/EC.



Safety jacket and trousers prevent UV damages to exposed skin, especially arms & legs.

- Certified UPF 50+ absorbing more than 90% of UV radiation
- Durable and resistant

REF (jacket): UJACK-01

REF (trouser): UTROUS-01

Beyond 12 minutes per day of arms & legs UV LED exposure at 10 mW/cm², protective clothes are recommended according to the European Directive 2006/25/EC.



Protection suit prevents UV damages to entire body, especially neck.

REF: USUIT-01

- Certified UPF 50+ absorbing more than 90% of UV radiation
- Resist to chemical products

Beyond 12 minutes per day of neck UV LED exposure at 10 mW/cm², protective suit is recommended according to the European Directive 2006/25/EC.



UV source isolation



UV shields are protective windows which isolate the UV insulated zone to protect all workers around.

They are made to measure to fit with your constraints.

REF: USHIELD-01

Beyond 2 minutes per day of eye UV LED exposure and 12 minutes of skin UV exposure at 10 mW/cm², protective shields are necessary to protect staff without safety equipment according to the European Directive 2006/25/EC.



Warning stickers



Warning stickers inform workers of radiation danger and invite them of wearing protection equipment. They are available in 3 sizes:

- 55 mm x 25 mm
- 165 mm x 75 mm
- 290 mm x 130 mm

REF: USTICK-01

REF: USTICK-02

REF: USTICK-03



Expertise

Our UV LED experts from UWAVE can come and check your production lines to:



Measure UV irradiance to **determine the maximum UV personal exposure time** compared with limits (European Directive 2006/25/EC).



Determine the most **adapted solution** to protect workers' eyes and skin.



Contact us to get our expertise. We will find together the equipment which fits with your application.